

Table of contents

Warning	2
Unpacking Instructions	2
Safety Instructions.....	2
Operating Determinations.....	3
Connection with the mains	3
Return Procedure	4
Claims	4
Description of the device	5
Overview	5
Frontside	6
Backside	7
Installation	8
Set Up and Operation	8
System Setup	9
Functions	10
01) Color.....	10
02) Adjust	11
03) OSD.....	11
04) Function.....	12
05) Exit.....	14
Maintenance	15
Troubleshooting	15
Product Specifications	16

Warning



**For your own safety, please read this user manual carefully
before your initial start-up!**



Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Your shipment includes:

- DMT DLD-72 MKII
- Euro plug power cable 2m
- User manual



CAUTION!
Keep this device away from rain and moisture!
Unplug mains lead before opening the housing!



Safety Instructions

Every person involved with the installation, operation and maintenance of this system has to:

- be qualified
- follow the instructions of this manual



CAUTION! Be careful with your operations.
**With a dangerous voltage you can suffer
a dangerous electric shock when touching the wires!**



Before you initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the system.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the system are not subject to warranty.

This system contains no user-serviceable parts. Refer servicing to qualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the system.

- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never leave any cables lying around.

- Do not insert objects into air vents.
- Do not connect this system to a dimmerpack.
- Do not switch the system on and off in short intervals, as this would reduce the system's life.
- Do not open the device and do not modify the device.
- Do not drive the inputs with a signal level bigger, than required to drive the equipment to full output.
- Only use system indoor, avoid contact with water or other liquids.
- Avoid flames and do not put close to flammable liquids or gases.
- Always disconnect power from the mains, when system is not used. Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.
- Make sure you don't use the wrong kind of cables or defective cables.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power-cord is never crimped or damaged. Check the system and the power-cord from time to time.
- Please turn off the power switch, when changing the power cord or signal cable, or select the input mode switch.
- Avoid ground loops! Always be sure to connect the power amps and the mixing console to the same electrical circuit to ensure the same phase!
- If system is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the system has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your system. Leave the system switched off until it has reached room temperature.
- If your DMT device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your DMT dealer for service.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- For replacement use fuses of same type and rating only.
- WARRANTY: Till one year after date of purchase.

Operating Determinations

This system is not designed for permanent operation. Consistent operation breaks will ensure that the system will serve you for a long time without defects.

If this system is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.

Any other operation may lead to dangers like short-circuit, burns, electric shock, etc.


You endanger your own safety and the safety of others!

Improper installation can cause serious damage to people and property !

Connection with the mains

Connect the device to the mains with the power-plug.

Always pay attention, that the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	FASE
N	BLUE	BLACK	SILVER	NULL
	YELLOW/GREEN	GREEN	GREEN	EARTH

Make sure that the device is always connected properly to the earth!

Improper installation can cause serious damage to people and property!



Return Procedure



Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail aftersales@highlite.nl and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:

- 01) Your name
- 02) Your address
- 03) Your phone number
- 04) A brief description of the symptoms

Claims

The client has the obligation to check the delivered goods immediately upon delivery for any shortcomings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless otherwise agreed in writing.

Complaints against us must be made known in writing or by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement of which the obligation is resulting.

Description of the device

Features

The DMT DLD-72 is a professional rack mount double monitor system. It can be used for VJ monitoring, surveillance systems and any other multimedia setup where monitoring is necessary. It is equipped with the most common inputs, BNC, RCA and S-Video. You can adjust the screens to your desired settings with easy separate menus for each screen.

- Dual 7" LCD Display
- 3HE 19" rack mount
- BNC, VGA, HDMI & RCA inputs
- 7" TFT screens
- Menu to adjust screen settings

Overview

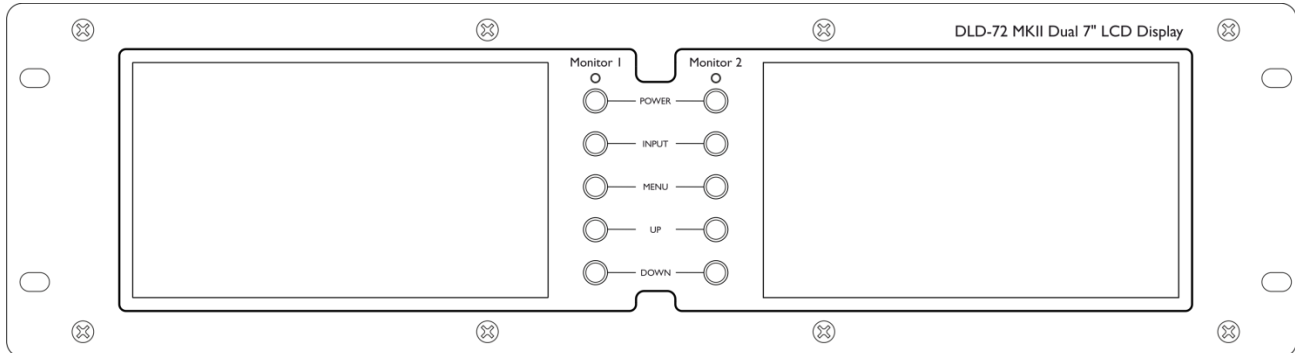 
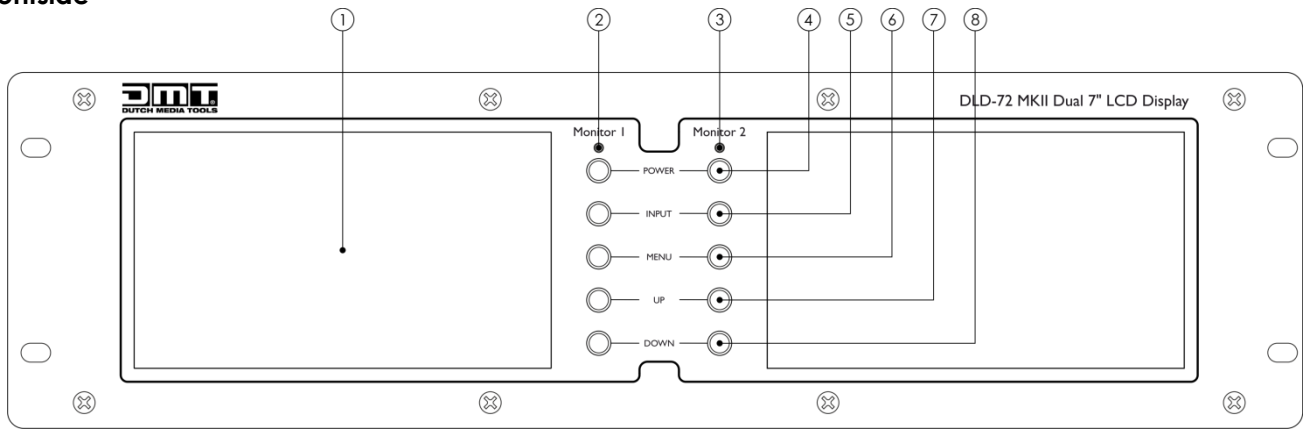 


Fig. 01

Frontside**Fig. 02****01) LCD Display****02) LED Power Indicator Monitor 1****03) LED Power Indicator Monitor 2****04) Monitor Power Switch**

Push the button to activate both or only one of the two screens.

05) Input

Push the button to switch between HDMI, AV1, AV2 and VGA modes.

06) Menu button

Push the menu button to select a (sub)menu.

07) Toggle up

Push the menu up button to select and adjust parameters in the onscreen menu.

08) Toggle down

Push the menu down button to select and adjust parameters in the onscreen menu.

Backside

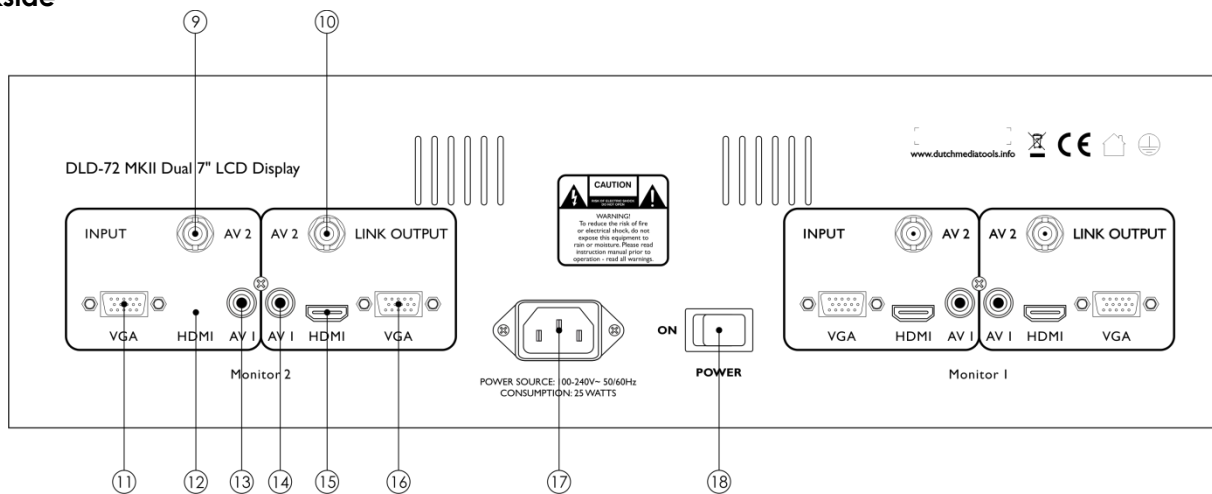 


Fig. 03

09) Video BNC Input (AV2)

Connect the coax video output of a media device to this input.

10) Video BNC Output (AV2)

Connect the coax video input of another monitor, screen or TV-set to this buffered output.

11) VGA Input

Connect the composite video output of a media device to this input.

12) HDMI Input

Connect the device to a laptop or a TV set and display their content on the device.

13) Composite Video Input (AV1)

Connect the composite video output of a media device to this input.

14) Composite Video Output (AV1)

Connect the composite video input of another monitor, screen or TV-set to this buffered output.

15) HDMI Output

Connect the device to a laptop or a TV set and use them to display the content of the device.

16) VGA Output

Connect the composite video input of a media device to this output.

17) IEC Power Connector

This connector is meant for the connection of the supplied power cord. Connect one end of the powercord to the connector, the other end to the mains, and turn on the **power (18)** switch to operate the unit.

18) Power switch

This is the main power switch. Switch to turn the device on.

Installation

Remove all packing materials from the device. Check that all foam and plastic padding is removed. Connect all cables.

Always disconnect from electric mains power supply before cleaning or servicing.

Damages caused by non-observance are not subject to warranty.

Set Up and Operation

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. The power supply is printed on the back of the device.

Do not attempt to operate a 120V specification product on 240V power, or vice versa.

Connection:

01) Turn the **power (18)** switch off.

02) Connect the DLD-72 MKII to your video devices using the proper cables.

CAUTION: Be sure that the power is off, when connecting the cables.

03) Turn the **power (18)** switch on.

System Setup

Note: To simplify the instructions, this manual is presented from the perspective of Monitor 1. Monitor 2's setup is carried out in the same way. Simultaneous referring to both monitors at the same time would cause unnecessary confusion.

When you push the **menu (06)** button, the main menu will be displayed.

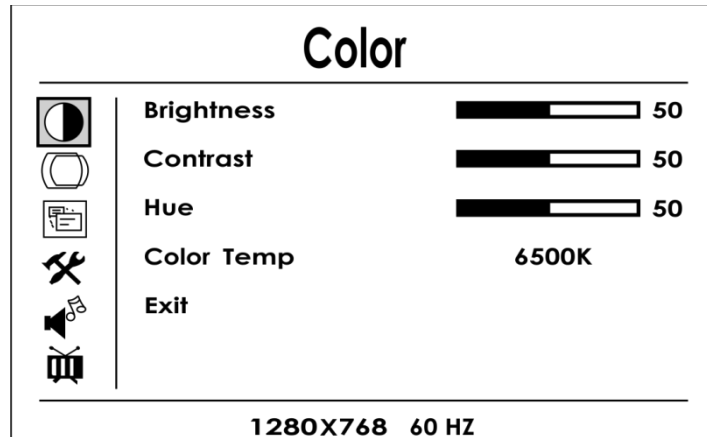 


Fig. 04

Tap the **toggle up (07)** and **toggle down (08)** buttons to proceed to the following menu screens:

- 01) Color
- 02) Adjust
- 03) OSD
- 04) Function
- 05) Exit

Functions

01) Color

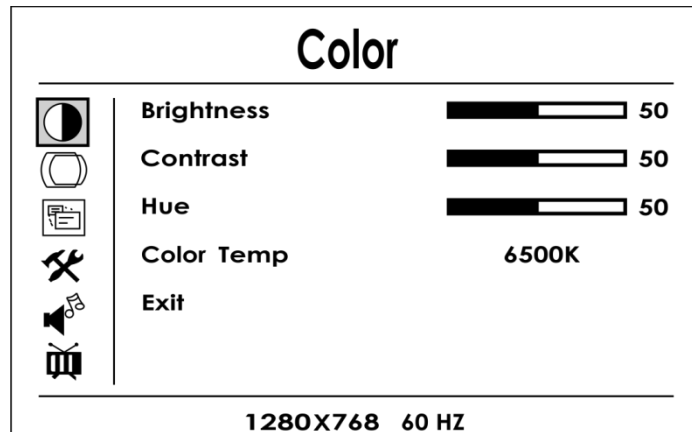 


Fig. 05

While in Menu, press the **menu (06)** button again. A thin blue line is now seen under BRIGHTNESS.

The blue line indicates the parameter which is supposed to be adjusted at a time.

If you want to adjust any of the parameters, tap **toggle up (07)** or **toggle down (08)** buttons.

The blue line moves respectively up or down.

Once you have chosen which of the parameters you want to edit, press the **menu (06)** button again to see a handful of options. To choose one of them, press the **menu (06)** button. See Fig. 06.

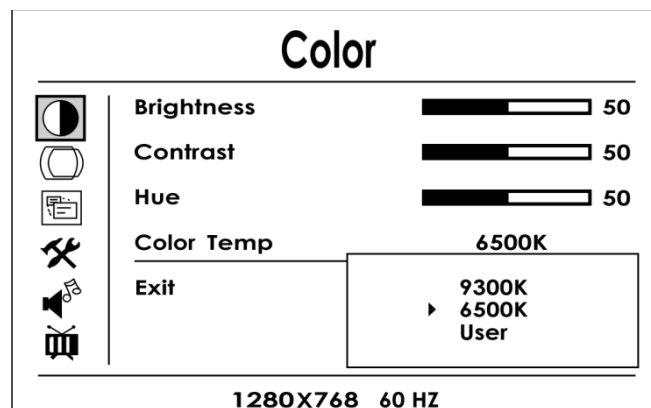 


Fig. 06

If you want to go one step back, press the **input (05)** button. The display will get back to the previously displayed submenu screen.

The remaining parameters are presented in adjustable bars (Brightness, Contrast and Hue) and can be adjusted by either increasing or decreasing their values using, respectively, **toggle down (08)** or **toggle up (07)** buttons.

Note: Press **menu (06)** button to make a parameter bar light up in blue. If the bar is white, adjustment is not possible.

02) Adjust

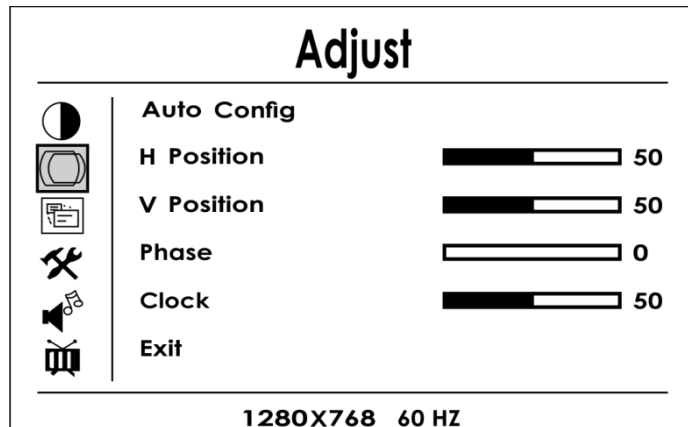 


Fig. 07

In this screen you can adjust basic main display parameters such as: Auto Config (On/Off), Horizontal Position, Vertical position, Phase and Clock.

03) OSD

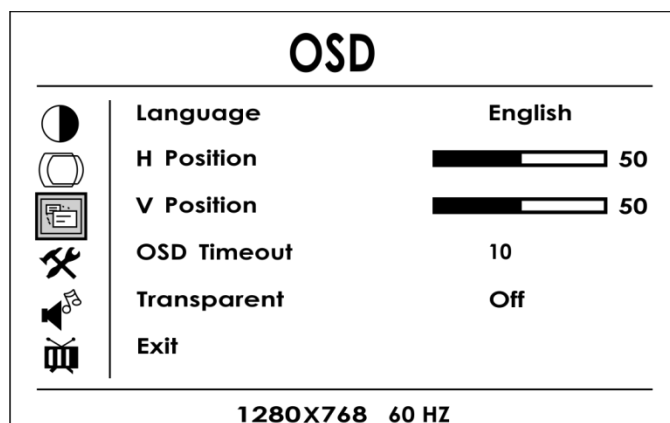 


Fig. 08

In this screen you can edit menu screen parameters, such as: Horizontal Position, Vertical Position, OSD Timeout (the amount of time after which the menu screen disappears if none of the buttons is pressed) and Transparency (adjustment range is from Off to 7 – respectively, from completely non-transparent to completely transparent).

The menu is provided in 10 different language versions. See Fig. 09.



Fig. 09

04) Function

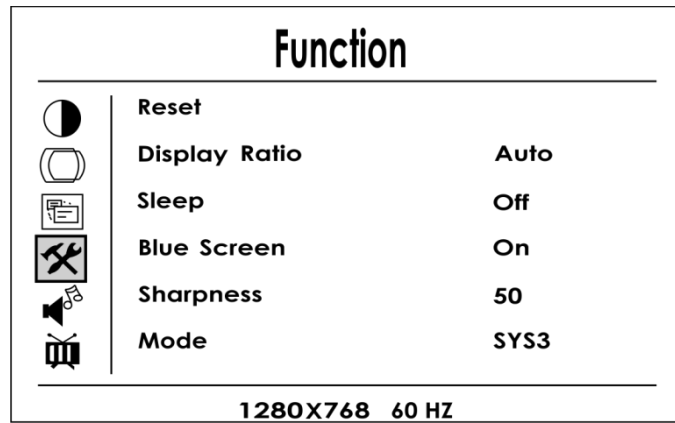 


Fig. 10

In this screen you can edit the following parameters:

- Display Ratio
- Sleep
- Blue Screen
- Sharpness
- Mode
- Exit

While editing **Display ratio**, you can select one of the three screen resolution presets (16x9, 4x3 and Auto). See Fig. 11.

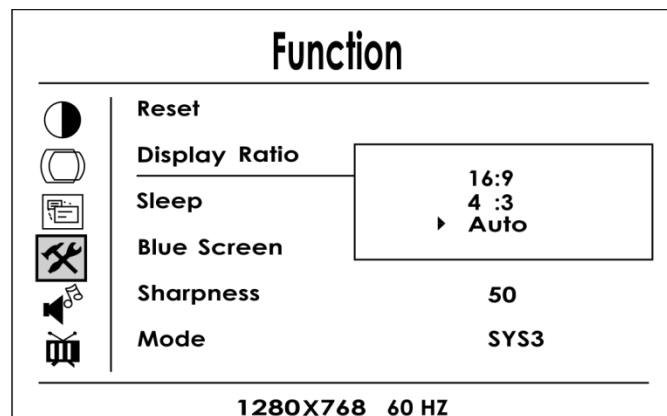 


Fig. 11

While editing **Sleep**, you can set up the amount of time after which the device enters stand-by mode, if unassisted. See Fig. 12.

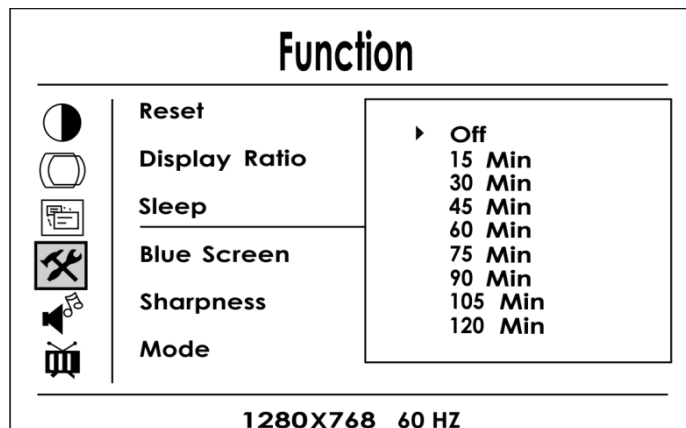 


Fig. 12

You can also adjust whether **Blue Screen** is switched on or off. It defines the color of the display before the unit is connected to another external device. See Fig. 13.

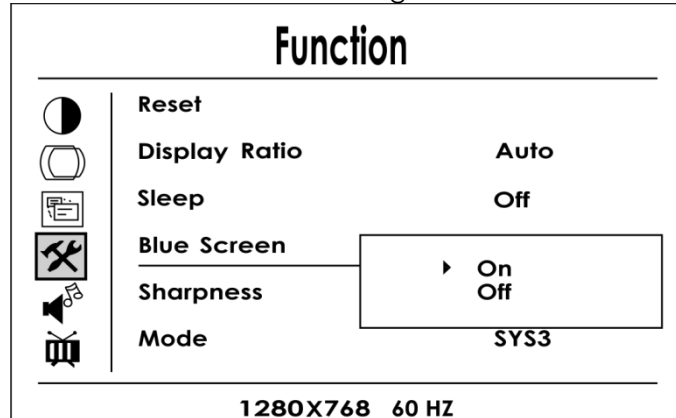 


Fig. 13

While editing **Mode**, you can choose from four display presets. See Fig. 14.

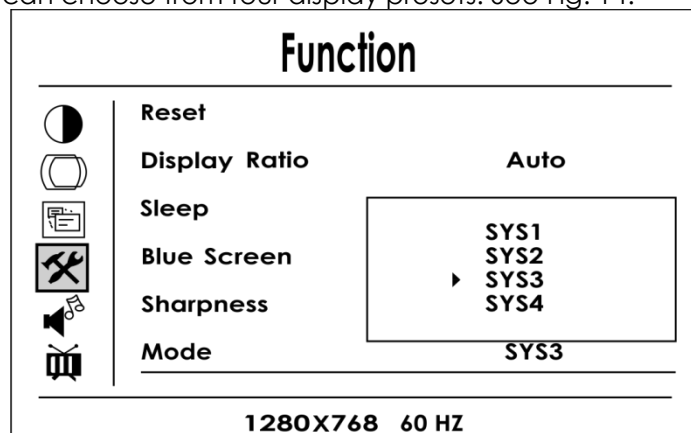 


Fig. 14

- **SYS1** – mirror flip
- **SYS2** – horizontal flip
- **SYS3** – normal view
- **SYS4** – horizontal and mirror flip

05) Exit

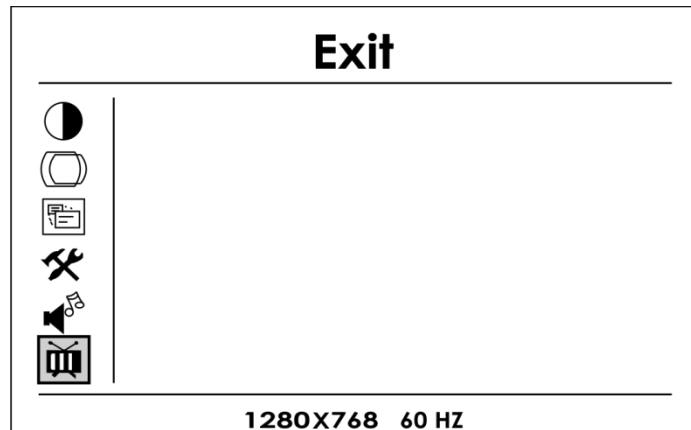 


Fig. 15

Exit menu screen can be used to abort editing the display parameters and to enter view mode.

Note: The other way in which you can leave the menu is continuous tapping **input (05)** button, on the front panel, until the menu screen disappears.

Maintenance

The DMT DLD-72 MKII requires almost no maintenance. However, you should keep the unit clean. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Do not use alcohol or solvents.

Keep connections clean. Disconnect electric power, and then wipe the audio connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

Troubleshooting



DMT DLD-72 MKII.

This troubleshooting guide is meant to help solve simple problems. If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

- 01)** If the device does not operate properly, unplug the device.
- 02)** Check power from the wall, all cables, connections, etc.
- 03)** If all of the above appears to be O.K., plug the unit in again.
- 04)** If nothing happens after 30 seconds, unplug the device.
- 05)** Return the device to your DMT dealer.

Product Specifications

Power supply:	AC 100V-240V, 50/60 Hz
Power consumption:	25 Watt
Display Type :	7" TFT
Power Connector:	Euro plug
Input Connectors:	BNC, VGA, HDMI, RCA
Output Connectors:	BNC, VGA, HDMI, RCA
Dimensions:	482 x 133 x 79mm (LxWxH) 19 inch x 3HE (LxH)
Weight:	2,3Kg

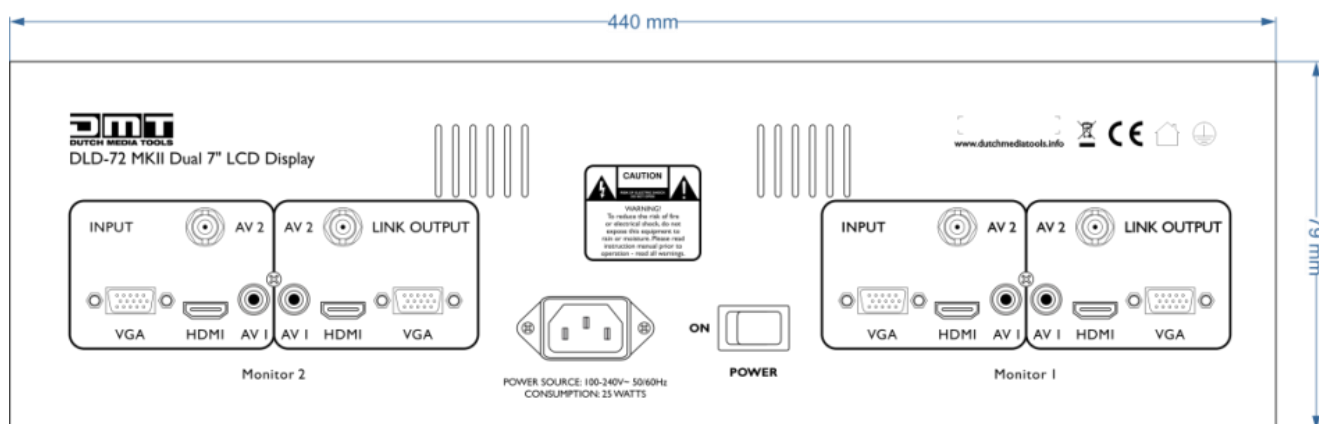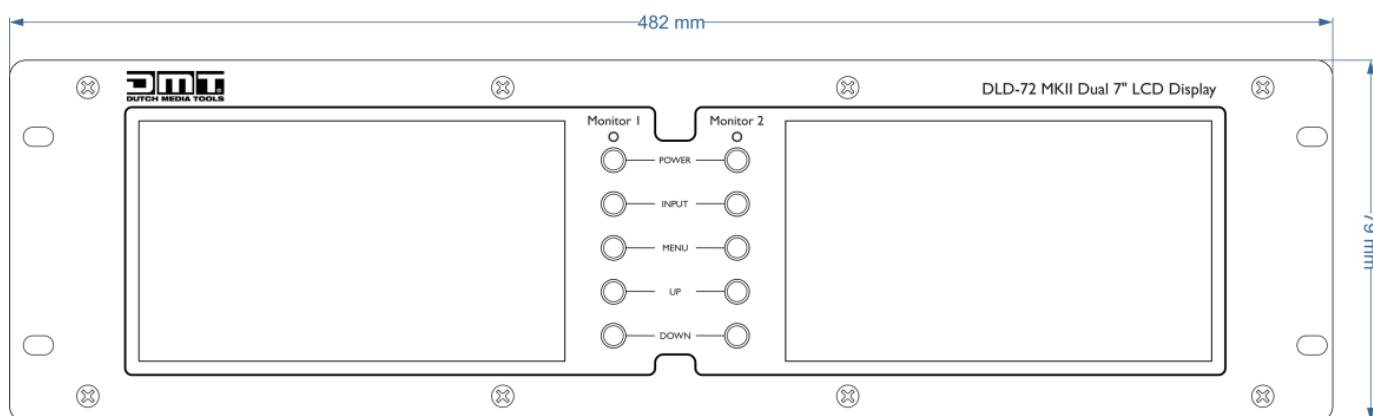  

Design and product specifications are subject to change without prior notice.



Website: www.DutchMediaTools.info
Email: service@highlite.nl



©2014 D.M.T.