
## **DV8x** Operation and Technical Details

The DV8x operates eight direct-control chain-hoist motors in staging and rigging applications. It features heavy duty connectors and controls housed in a compact 3U 19" rack-mount steel chassis making it ideal for both touring and installations. The DV8x fully conforms to European EMC and LVD requirements.

An input MCB provides protection against output overload faults. The MCB is rated at 32A with D characteristic providing 10 - 20 times normal rating for start-up surges.

Phase direction and power on indicators show incoming mains status. The phase reversal switch (on rear panel) should be set so this green Phase neon is lit, to ensure that the motors run in the correct direction

Local Up/Down switches allow the hoists to be selected on the DV8x front panel. Hoists are activated to this assignment by the front-panel GO button or Remote GO via GO Link In. Selection can also be made on the optional RC8 or RCX remote handsets and activated from their GO button. Up/Down switches are protected by a crash bar and direction is indicated by green and red LEDs. /

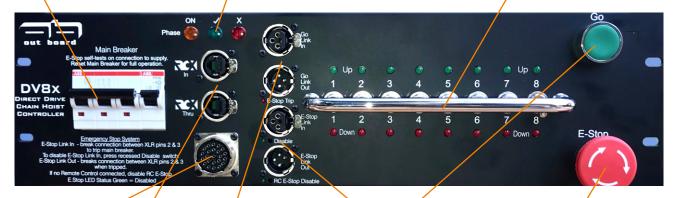

NB: Emergency Stop automatically self-tests by tripping the Main Breaker on connection to supply. Reset Main Breaker to restore operation

Remote operation of the DV8x is available using the optional RC8 remote control handset, which provides Up/Down switches, GO and E-Stop. The RC8 handset connects to the DV8x via a detachable multipore cable. Programmable control systems such as the IBEX PHC+ can also connect to this Remote Control socket to automate the DV8x.

Optional **RCX**/interface Ethercons for **RCX SMART Remote** digital remote control handset.

After selecting Up/Down on the DV8x front-panel, hoists are activated using the front panel GO switch or by using the GO Link facility. The GO Link feature allows the DV8x to be controlled from an optional handheld Remote GO button, and also allows any number of DV8x's to be controlled from a common GO command. To initiate a Remote GO, pins 2 & 3 are shorted together on the 'GO Link In'. This causes an internal relay to link pins 2 & 3 on the 'GO Link Out' for daisy-chaining to the next unit. To connect multiple DV units together, standard 3 pin XLR cables connect the 'GO Link Out' of the first DV8x to the 'GO Link In' of the next. The first unit's front-panel GO or Remote GO switch (connected to the GO Link In) will now control the others.

Front panel Emergency Stop trips the Main Breaker when activated. Also activated by the E-Stop button on the RC8 or RCX handset, and also optional remote push-to-break Remote E-Stop button connected across pins 2 & 3 of the E-Stop Link In XLR. Multiple DV units can be linked via E-Stop Link Out & In. Remote E-Stop and RC8 E-Stop Disable recessed switches must be activated when Remote E-Stop or RC8 are not connected. Shows green LED when Disabled. E-Stop function self-tests by tripping breaker on connection to supply.



ONLY TO BE OPERATED BY A QUALIFIED RIGGING PROFESSIONAL. ONLY USE WITH PERSONS IN THE HAZARD ZONE IF RISK
ASSESSMENT HAS BEEN CARRIED OUT BY A QUALIFIED RIGGING ENGINEER.

Connections to hoists are arranged on two female 19-way Socapex connectors, in groups of four channels of Up/Down switched 3-phase power and

The Phase Reverse switch should be set so the frontpanel green Phase neon is lit to ensure that the motors run in the correct direction and that the correct Limit Switch function is maintained. Main's power inlet on 1.5m flying lead terminated with a 5 pole 32A CeeForm cable plug carrying 3 phase L1/2/3, N + E.

Dimensions: H: 3U (13.34cm) x W: 19" (48.26cm) x D: 31cm. Allow 10cm for rear chassis connectors and inlet cable bend radius. Shipping Weight: 14kg





## **DV8x** Direct Control Chain Hoist Controller

The DV8x is one of our wide range of compact and solid chain hoist controllers, ideally suited to both touring and installation. The DV8x is built in a fully serviceable rugged steel 3U rackmount chassis.

Analogue remote control options include ergonomic RC8 handsets or Remote Go and E-Stop switches.

Optional RCX SMART Remote interface for digital remote control.

- Eight channels of direct control and 3-phase hoist power distro
- High-grade internal reversing contactors for each hoist
- Industry standard Ceep (Socapex-style) control & power connectors. Optional trussmount CeeForm Splitter Boxes
- Input voltage phase indicators and reversal switch
- Optional compact and ergonomic RC8 handset for remote control, with built-in Emergency Stop
- Optional Remote GO and E-Stop, linkable to multiple units
- Optional RCX SMART Remote Ethercon digital interface
- Integral Emergency Stop button, linkable across multiple units. E-Stop circuit features power-up self-test function.
- Internal sub-assemblies designed for optimum serviceability
- Fully compliant with CE directives



